

RG725 Defaulting Instructions

Factory Reset

1. Press and hold power button (above PTT)
2. Once powered on go to settings
 - a. Select Reset Options
 - i. Select Erase all data