

M5 Commissioning Instructions

Requirements

- M5
- Power Cable (supplied)
- PSU
- SIM Card

The device should be in its default factory state. If not please follow **Internal M5 Defaulting Instructions** process

SIM Insertion

1. Turn device upside down
2. Lift rubber cover
3. Inset SIM as per orientation shown on device housing
4. Close rubber cover
5. Press down to secure

Initial Device Setup from Default

1. Connect Power Cable to the device (plug will only go in one way)
2. Connect Power Cable to 12-24VDC power source
3. Rotate volume knob clockwise until you hear a click and allow to power on
4. Click Got it on the welcome hint
5. Setting up Wi-Fi connection
 - a. Open Settings from the home screen
 - b. Select Wi-Fi
 - c. Toggle to On
 - d. Select available Wi-Fi network
 - e. Enter password
 - f. Click Connect
 - g. Click back button

SIM Setup

1. From step 5.g. select More
 - a. Click Cellular networks
 - b. Turn Data Roaming On
 - c. Select preferred network type as 4G
 - d. Click Access Point Names/APN

Wireless Logic SIM

- i. Click "+" icon
- ii. Set name to "Wlapn.com"
- iii. Set APM to "Wlapn.com"
- iv. Set Username/Password to Airsys
- v. Click three dots icon and "Save"

Jola SIM

- i. Click "+" icon
 - ii. Set name to "globaldata.iot"
 - iii. Set APN to "globaldata.iot"
 - iv. Click three dots icon and "Save"
- e. Select new Access Point Name/APN
 - f. Enhanced 4G LTE Mode set to On
 - g. Select Network Operators
 - h. Choose network provider
 - i. Select Data Usage
 - j. Mobile Data set to On Click the back button twice

Device Settings

1. From Step 2.j Select Display
 - a. Select Sleep
 - i. Choose desired time limit
 - b. Click back button
2. Select Location
 - a. Confirm it is on and set to Device only
 - b. Click back button
2. Select Security
 - a. Unknown sources set to On
 - b. Choose OK if prompted
 - c. Click back button
3. Select Date & time
 - a. Ensure Automatic date & time is set On
 - b. Ensure Automatic time zones is set to On
 - c. Use 24-hour format is set to On
 - d. Click back button twice

Airsys.Cloud Application (.apk) Download

1. Open browser from home screen
2. Allow 4 x permissions
3. Go to <https://www.airsys.cloud>
 - a. Click 3 bars icon (top right)
 - b. Click Downloads
 - c. Pick A.Flex Smart Mobile APP or A.Flex PTT Mobile APP (use dependant)
 - d. The app will download

Airsys.Cloud Application (.apk) Install

1. Once downloaded open File Manager from home screen
 - a. Select Internal storage
 - b. Select My Favourite
 - c. Select the Airsys.Cloud application you have just downloaded
 - d. Click Next
 - e. Click Install
 - f. The app will be installed on the device
 - g. Once installed click Done

Airsys.Cloud Application (.apk) Login

User credentials required from this point. Follow User Setup process to obtain.

1. Open the Airsys.Cloud App from the home screen
2. Select No to Send collected data for improvement when prompted
3. Select Yes to Allow save password

Then

1. Select QR code reader icon (bottom left)
2. Scan supplied QR code
3. Click Connect

Airsys.Cloud Application (.apk) Login cont.

Or

1. Click the gear icon (bottom middle)
 - a. Insert Username and click OK (variable)
 - b. Insert Password and click OK (variable)
 - c. Insert Server and click OK (002.airsys.cloud permanent)
 - d. Insert Port and click OK (Variable)
 - e. Autostart set to On
 - f. Autologin set to On
 - g. Event sounds set to On
 - h. Use HW intents set to On
 - i. Click Select HW intents
 - i. PTT set to On
 - ii. SOS set to On
 - iii. Channel Change set to On
 - iv. Channel Change reverse order set to On
 - v. Click back button
 - j. Click the back button
 - k. Click Connect

Final Device Setup

1. Open Settings from the app drawer
 - a. Select Wi-Fi
 - i. Toggle Wi-Fi to Off (unless intended to use)
 - ii. Click back button
 - b. Select Bluetooth
 - i. Toggle Bluetooth to Off (unless intended to use)
 - ii. Click back button